



VIVA

UMD 11 Decoupler

1. Slide One-Time packaged media through the channel following directional arrows featured on top of the decoupler
(The DVD front cover should face the side WITHOUT the stopper bar lock)



2. After sliding package through channel, always visually check to ensure case is unlocked and source tag is deactivated before customer leaves checkout area



RED lock indicates LOCKED



GREEN lock indicates UNLOCKED

3. In cases where product is returned, One-Time packaged media can be locked and recycled in the store by
 - a. Sliding the case through the lock channel in the opposite direction of the directional arrows featured on the top of the decoupler
 - b. Case cover must face the side WITHOUT the stopper bar lock

Unauthorized Use Prevention

The One-Time decoupler features a channel block to avoid unauthorized usage when the checkout counter and decoupler are not in use



Insert key in lock



Turn key to activate channel block